

Operating instruction 2340

Commissioning




Rotary button

To open, enter the factory code
0 (left) 0 (right) to open.


↪ If the code is to be changed, turn
the rotary button to the left until
it is above the resistance, hold it there
and set the new code.

Release the rotary button = New code is
Now saved.
Blur code

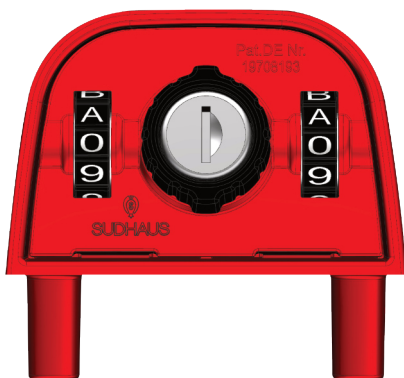

*If you have forgotten the code you set
we offer you a simple solution:
Simply ask us for the
SUDHAUS code finder for lock 2340*


Emergency opening

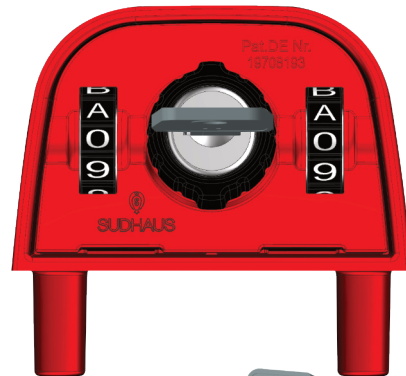

Insert key


↪ Turn the key to the left as far as it will
go. The lock opens, without knowing
the set code.

Release the rotary button = New code is
Now saved.

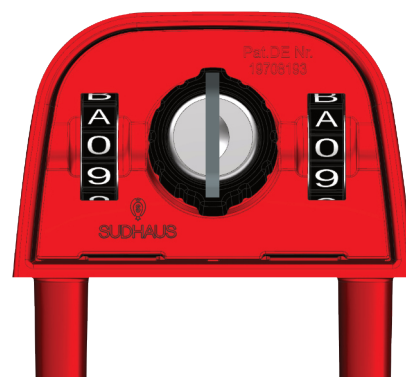


Operating instruction 2340


Code finding

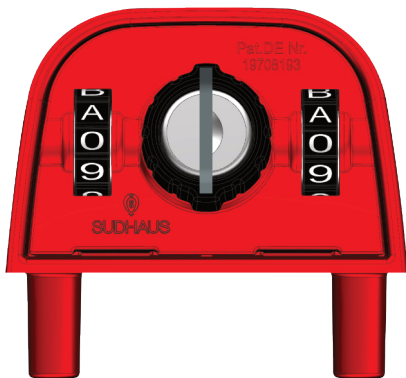


Open the lock with the key.

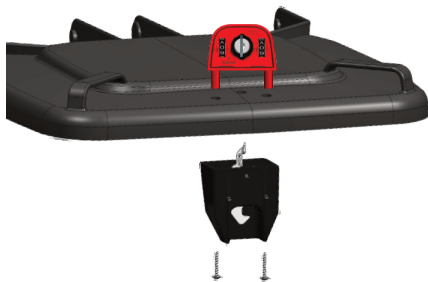

Open the cover and unscrew the upper part of the lock from below. Now look at the upper part of the lock from below.

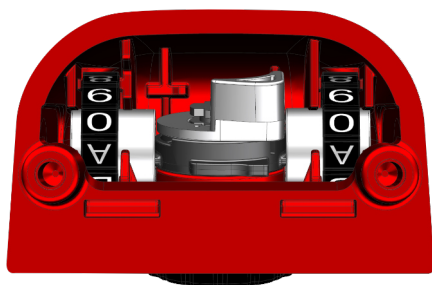


Look into the upper part of the lock from below so that the rotary button points in your direction.

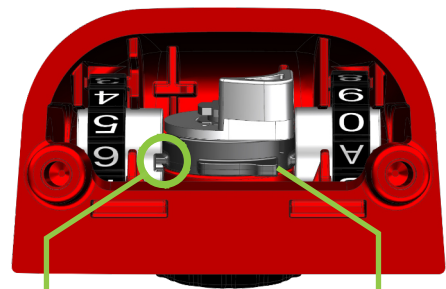


short groove locking lug

Turn the left gear wheel until the short groove of the gear wheel is above the locking lug of the rotary button.

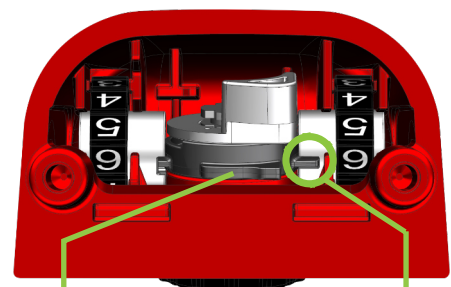

locking lug long groove

Turn the right-hand gear until the long groove of the number wheel is above the locking lug of the rotary button.

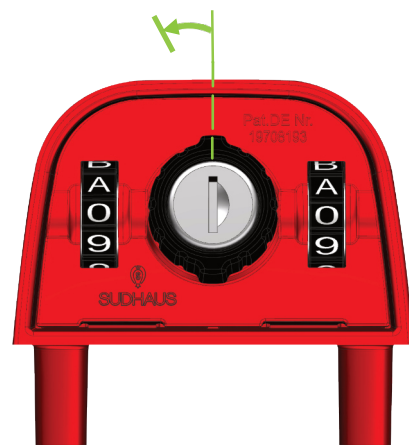

If the correct code is set, the rotary button should now have some play.

